
Installation Manual
Double DIN Kit
Part-No:. CT23PO02

Porsche 911 (type 996) 1997-2006 (with PCM)
models without cupholder

Compatible with double DIN devices

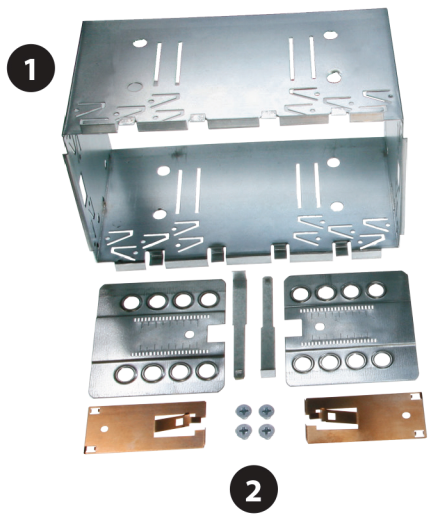



Double DIN Set contents
- (1) Metal Frame
- (2) Installation Kit
- (3) Facia Plate


© 12/2008 ALL RIGHTS RESERVED. Technical changes possible. No liability for misprints.

Models with PCM system




1. Insert Porsche radio release keys in the holes of the PCM head unit.

   Remove OEM head unit by pulling it towards your direction.

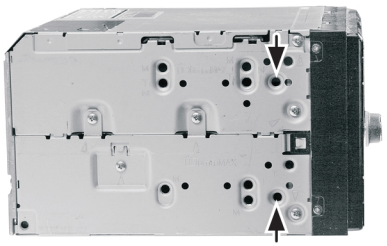

(sample photo)

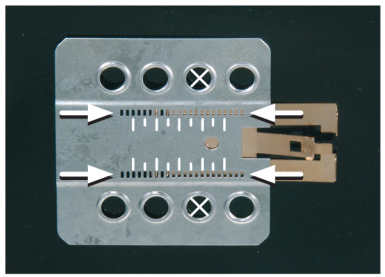

(sample photo)

Mount the metal brackets to the double DIN head unit.

The position of the copper coloured holder can be adjusted to your needs for perfect fit. (see sample)



2. Place the facia plate on the dashboard.
   Push the metal frame into the facia plate.
   Connect all required circuit points and push the double DIN head unit until it snaps in.
   Place the trim frame.

   Reinstall everything in reverse order.

All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidential or indirect damages.